

Zebra ZC10L Setup & Packing Guide

Shipment Content:

- 1 x ZC10L Card Printer
- 1 x Platen Roller
- 1 x Power Cable
- 1 x USB Cable
- 1 x Card Catcher
- 1 x Benson Box



Quick Setup:


1. **Remove printer from the case.** Grab the printer from the bottom on both sides using the space provided in the case. *The printer is heavy, make sure to have a firm hold of the printer when pulling it out.*

2. **Insert cleaning roller.** *See image below and/or scan this QR code for a video guide.*



- a. Place the printer on a flat surface and open the top door.
- b. Push the cleaning roller into place as shown until you hear an audible click. *Pay close attention to the rollers end, the thicker end goes to the left. Please see the diagram below.*


Roller must be installed prior to use and removed before shipping printer back.

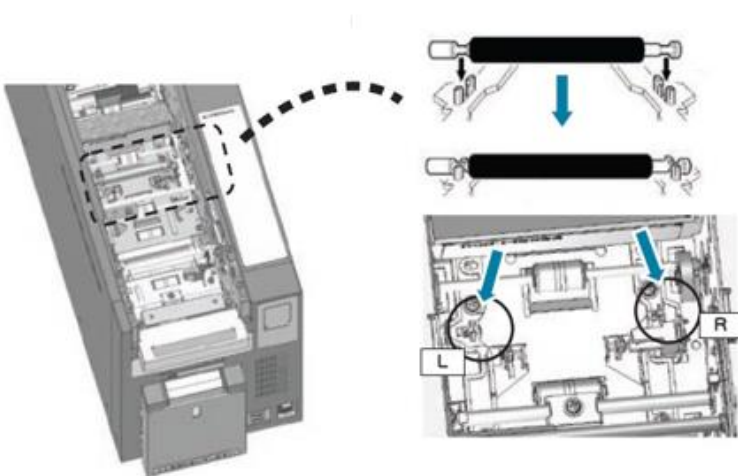

3. **Install Print Ribbon.** *See image below and/or scan the QR code for a video guide.*



- a. Slide the supply spool into the guide rails and toward the rear of the printer. *The White end of the Roll must go in first on the left side, matching the White Canal.*
- b. Slide the take-up spool into the guide rails and toward the front of the printer.

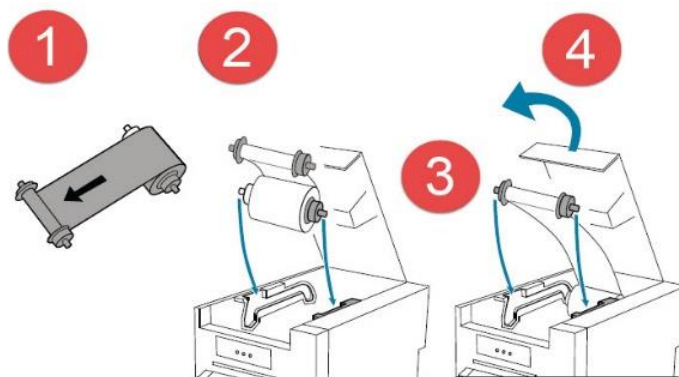

Setup Video Guide:

Scan this QR code with your phone camera for video.



Contact our Support Team:

www.choose2rent.com/help
+1 (800) 622-6484 Ext. 3 (USA)

Zebra ZC10L Setup & Packing Guide

4. Insert the Plastic Cards:

First, open the front drawer by pressing the card drawer release button.

5. Pull on the blue latch and insert the Plastic cards as shown below. *Fan them out to remove any static charge from the cards.*

6. Place the Card Pickup Tray on the outside door and close the front cover.


7. Insert the **Power Cable** into the rear of the printer.

8. Connect one end of the **USB cable** to the rear of the printer and the other end to your laptop.


9. Flip the power switch to On.

10. Disposing of card waste.

- Open the card drawer** by pressing the card drawer release button.
- Remove the waste bin** and empty the contents into a trash receptacle.
- Re-insert the waste bin.**
- Close the card drawer.**

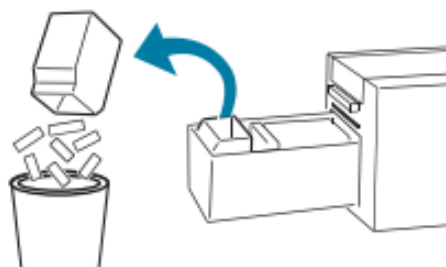

Reminder: Remove the cleaning roller by pulling up on it. Place back into slot inside pelican case.

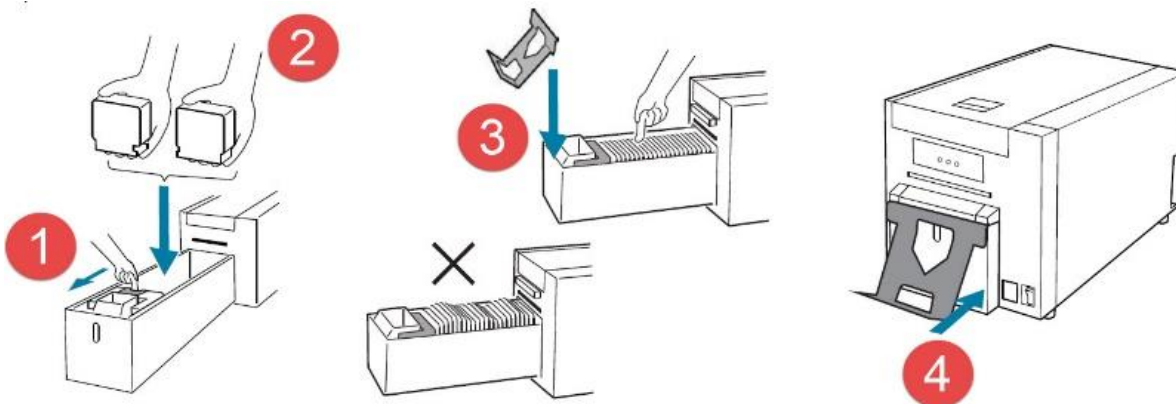

Setup Video Guide:

Scan this QR code with your phone camera for video.



Contact our Support Team:

www.choose2rent.com/help
+1 (800) 622-6484 Ext. 3 (USA)