RENTAL EQUIPMENT SETUP GUIDE

Zebra printer Configuration from a Web Browser

Quick Setup:

- 1. After completing the hardware setup, and having the printer connected to the network please follow these steps to setup the Zebra ZD printers outside of a registration App.
- 2. Open a Web Browser (Safari) and type the printer's IP Address on the Address Bar, press enter. You can find the IP address on the screen of your ZD500/ZD620. For non-screen models push and hold Feed + Cancel for 3-seconds to retrieve a status sheet.



Setup Video Guide:

Scan this QR code with your phone camera for video.



 Once the "Internal Wired PrintServer" page loads select "View and Modify Printer Settings. *Password is "1234".*



4. Now go to "Media Setup" and set the "Sensor Type" and "Print Method" according to your badge-stock specifications.

Most common options are Sensor Type: Mark Print Method: Direct Thermal.

5:48 PM Wed Apr 6				
< >	AA	192.168.0.100	C	<u>ث</u>
		Zebra Technologies		
		ZTC ZD500-203dpi ZPL		
		Help Desk		
		Internal Wired PrintServer		
		Home		
		View and Modify Printer Settings		
		General Setup		
		Serial Communications Setup		
		Network Configuration		
		Print Listings on Label		
		Calibration		
		ZPL Control		
		Advanced Setup		
		Save Current Configuration		
		Restore Saved Configuration		
		Restore Default Configuration		
		Restore Default Network Configuration		
		Reset Network		
		Home: https://www.zebra.com		
		Support: https://www.zebra.com/support.html		



Contact our Support Team: www.choose2rent.com/help +1 (800) 622-6484 Ext. 3 (USA) +49 40 226 360 - 590 (Europe)

RENTAL EQUIPMENT SETUP GUIDE

Zebra printer Configuration from a Web Browser

5:49 PM Wed Apr 6 •••			5:48 PM Wed Apr 6						
< > 😡	Translation Available	- ר) ک	< >	AA		- 🖞 S			
Zebra Technologies ZTC ZD500-203dpi ZPL				Zebra Technologies ZTC ZD500-203dpi ZPL Help Desk					
	Help Desk				Internal Wired PrintServer				
Internal Wired PrintServer				Home					
	Home	General Setup							
Media Setup				Printer Name Holp Desk					
	MEDIA TYPE NON-CONTINUOUS © SENSOR TYPE MARK © SENSOR METHOD CRECETIVE © PRINT METHOD DRECETTHERMAL © PRINT WIDTH Range 2 to 832 832 MAXIMUM LENGTH Range 203 to 7967 7967 Cubmit Changes				Printer Description				
Home: <u>https://www.zebra.com</u> Support: <u>https://www.zebra.com/support.html</u>				Home: https://www.zebra.com Support: https://www.zebra.com/support.html					

- 5. Select "Submit Changes".
- 6. Select once again "View and Modify Printer Settings" then select "General Setup".



- 8. Select "Submit Changes".
- 9. Now you can go to your registration/check-in app to do a Test print and confirm the printer is correctly set-up.

Setup Video Guide:

Scan this QR code with your phone camera for video.





Contact our Support Team:

www.choose2rent.com/help +1 (800) 622-6484 Ext. 3 (USA) +49 40 226 360 - 590 (Europe)